

emcogroup

Designed for your profit



NOT JUST TRAINING: REAL ACTION! CONCEPT MILL 260

**CNC training with industrial
performance**

MILLING
EMCO-WORLD.COM

Concept MILL 260

The new Concept Mill 260 combines all benefits of the proven CM 250 with comprehensive improvements in the areas of: Drive technology, optimized technical data, a new Design, drive power of 6,8 kW and a 20-station tool magazine with double-gripper. With the stable and compact construction the Concept Mill 260 fits even in smallest space.

1 TOOL MAGAZINE

- 20-station tool magazine
- Quick release with double-gripper
- Tool system SK 30 DIN 69871

2 MAIN DRIVE

- Infinitely variable main drive
- Powerful asynchronous AC motor
- Main spindle bearing: Lifetime lubricated

3 MACHINE BASE


- Stable construction

4 CONTROL

- Latest digital AC control technology
- 21,5" Touchscreen
- MOC: Integrated PC
- WinNC: All standard NC controls on one machine
- Multifunction wheel

5 MACHINE DESIGN

- Stable, gray cast-iron construction
- Profile rails in X / Y / Z with automatic central oil lubrication

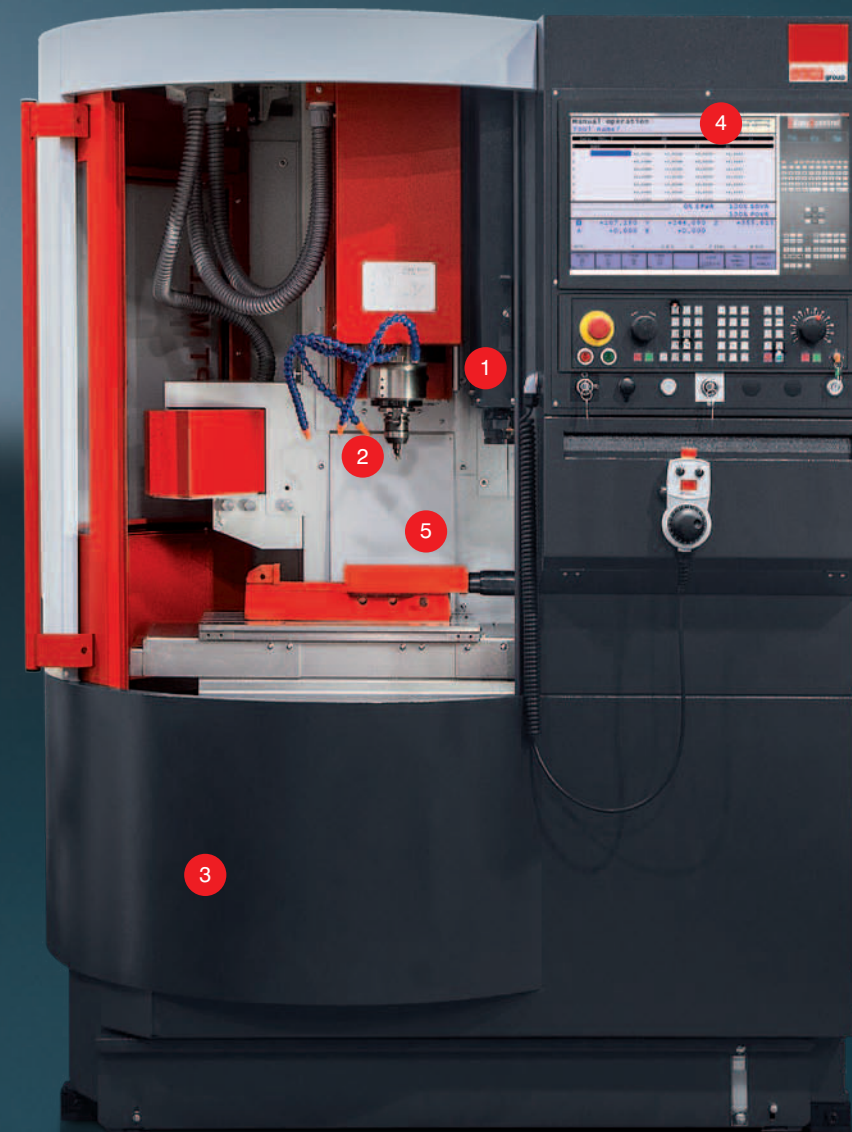

Milled part
(Aluminum)




Cutter head
(Non-ferrous metal)

[Engineering]

Highlights

- High drive speed
- 20-tool magazine
- Tool taper SK30 according DIN 69871
- Stable and compact machine construction
- Best view when fully enclosed
- USB and Ethernet interface integrated
- Servo motor technology in all axes
- Made in the Heart of Europe

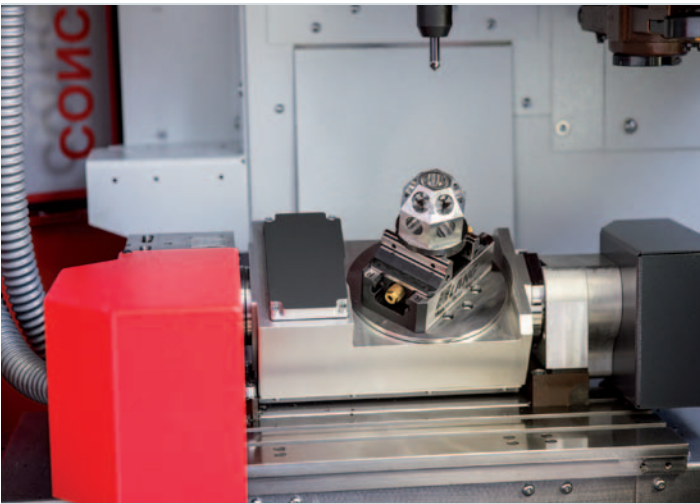

4th - / 5th axis: A rotary table can be mounted on the machine table, which can be expanded modularly to a tilting/rotary unit (4 .- / 5th axis): This allows the CM260 to be used for 5-axis machining (3 + 2).

[Engineering]

Options

- Turning-tilting Table (4th/5th axis)
- Automatic door
- Large number of automation possibilities
- Chip conveyor
- Coolant system
- Integration into FMS and CIM systems using DNC and robotic interface




[The interchangeable control]


The concept of the interchangeable control unit, which can be fitted to all Concept machines, is unique. It enables the user to be trained on all CNC industry controls that are common on the market needing just one machine. The result: The CNC technicians can be applied more flexibly, which provides a significant competitive advantage for both the company and employees.



The change to a different control system is carried out within a minute by calling up the respective software

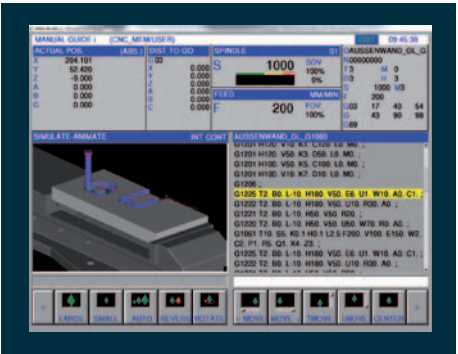

WinNC for Fanuc 31i-B including Manual Guide i is one of the WinNc controls.

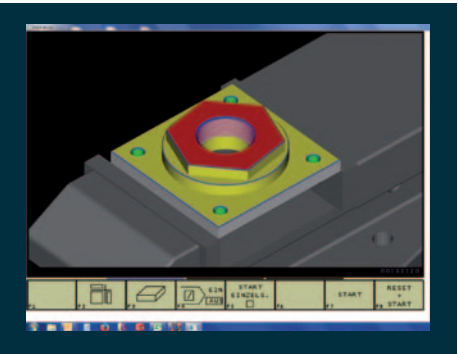

Simulation suitable for training using Win3D View

[Workpiece]

1 BORE TEMPLATES

2 CONTOUR MILLING

3 GROOVE MILLING



[Easy2control: New operating concept]

The machine is equipped with the latest software of the interchangeable control, with which control specific and machine keyboards of the WinNC can be displayed on a 16:9 Full-HD screen – Easy2control. The different panels for machine, control and quick access can be switched via tabs. The buttons and rotary knobs can either be operated by using the mouse or directly on the keys and switches on the touchscreen.



Easy2control

Installation plan Concept MILL 260

Concept MILL 260

Technical data

Work area

Travel along X axis	350 mm (13.8")
Travel across Y axis	250 mm (9.8")
Travel vertical Z axis	300 mm (11.8")
Min. distance spindle nose - table surface	120 mm (4.72")
Max. distance spindle nose - table surface	420 mm (16.54")

Table

Table dimensions (L x W)	520 x 300 mm (20.4 x 11.8")
T-slots: Quantity, width, spacing:	5 x 12 x 45
Max. table load	100 kg (220 lb)

Milling spindle

Max. speed	150 – 10000 rpm
Power asynchronous AC motor	6.8 kW
Maximum torque	34 Nm
Drive	infinitely variable

Axes

Rapid motion speed in X / Y / Z axes	24 m/min (94.4"/min)
Work feed	0 – 10 m/min (0-39.3"/min)
Max. feed force	3000 N
Positioning variation acc. to VDI 3441 (X/Y axis)	0.004 mm (0.00016")
Positioning variation acc. to VDI 3441 (Z axis)	0.004 mm (0.00016")

Tool system


Number of tool stations	20
Tool taper according DIN 69871	SK 30
Tool management	chaotic*
Max. tool diameter (*free adjacent pockets)	63 (*80) mm 2.5" (*3.15")
Max. tool length	200 mm (7.9")
Max. permissible tool weight	5 kg (11 lb)
Tool changing time	2.5 s

General data


Connected load	9 kVA
Machine diameters (L x W x H)	1600 x 1700 x 2200 mm (63 x 66.9 x 86.5")
Weight	1970 kg (4334 lb)
Compressed air required	6 bar
* without toolchanger	

EMCO WinNC controls

SIEMENS Operate 840D sl / 828D
FANUC Series 31i
FAGOR 8055
Heidenhain TNC 426/430
Heidenhain TNC640

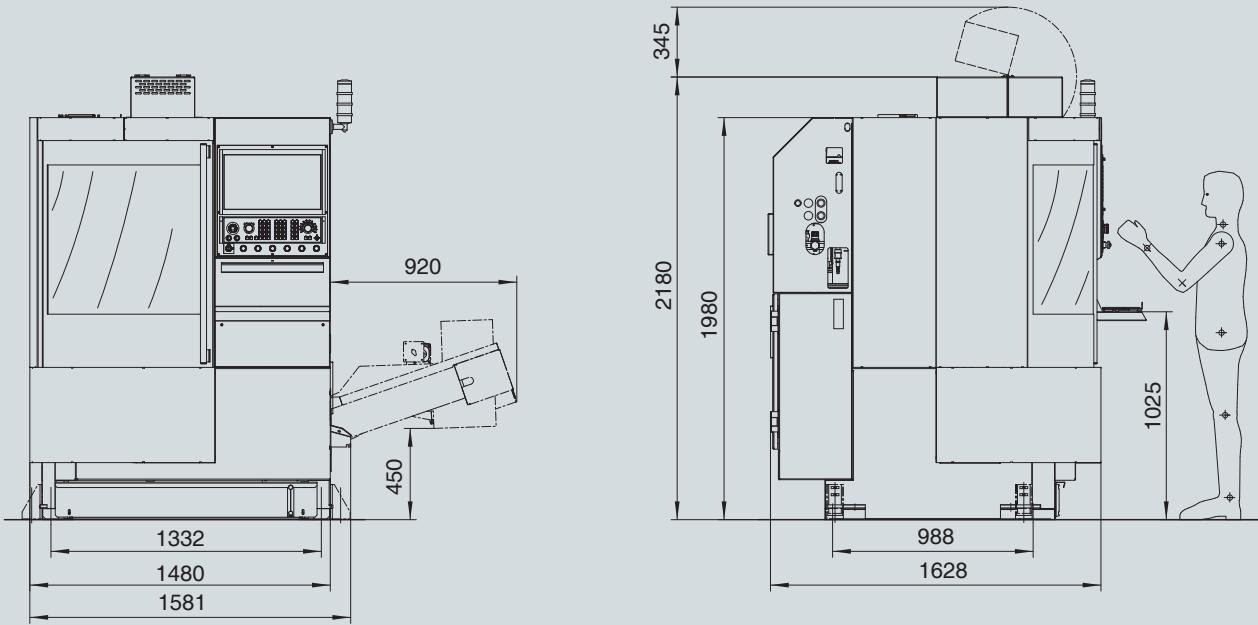

Specifications in millimeters

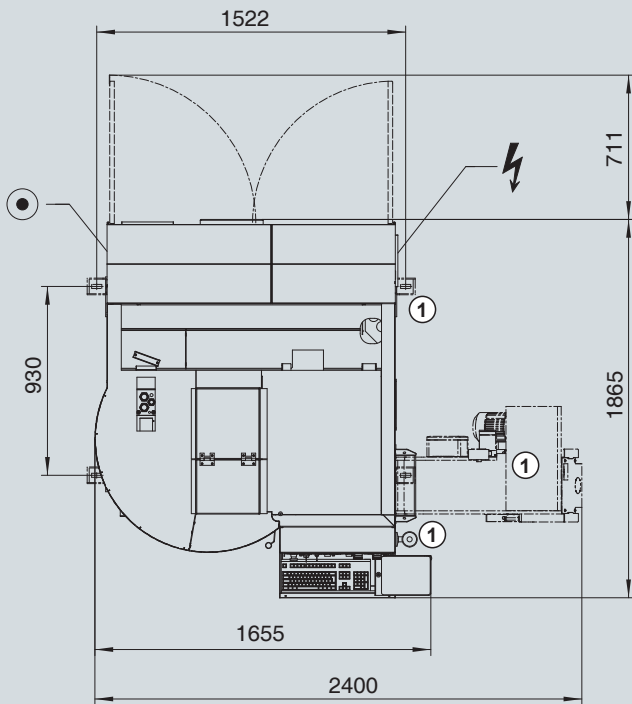

①.....Option

Specifications in millimeters

